

(200866-W)

**Nama Pencawang** : PE UPTOWN MACHANG NO 2  
**Functional Location** : DMAC/PCE/J00249  
**Kawasan** : MACHANG  
**Koordinat** :  
**Jenis Pencawang** :  
**Jenis Comms** : DSR  
**CAASDU** :  
**DTU ID** :  
**SIM CARD No** :  
**IP Address** :

DATE	
<b>BCE</b>	:
<b>RCB</b>	:
<b>Work</b>	:
<b>Comms</b>	:

**RTU/FTU Brand** : DONG FANG  
**RTU/FTU Serial No.** : RMU BJ0120  
**RTU/FTU No.** : TNB131/2024  
**RTU / FTU Protocol** : IEC101

SIGNAL	FEEDER												DETAILS RTU		
	DMC 07155	DMC 07156	DMC 07157	DMC 07158							RTU/FTU	BCE 1	BCE 2	SAT Form	: Ada
														Master sheet	: Ada
														As Built Drawing	: Ada
INDICATION													DETAILS PIW		
CB OPEN	✓	✓	✓	✓										No. PIW	
CB CLOSE	✓	✓	✓	✓										Wiring List	: ADA
PROT. ALARM															
SUPER/REMOTE	✓	✓	✓	✓										As Built Drawing	: ADA
OVERCURRENT														RCB Brand	SATRIA
EARTHFAULT														RCB No.	
IRF														No of RCB	1
EARTH SWITCH	✓	✓	✓	✓										RCB 1 Serial No.	
EFI OPERATED	✓		✓											RCB 2 Serial No.	
C.E.S											✓			RCB 3 Serial No.	
CHARGER ALARM												✓		BCE 1 Brand	BERKAT INSAF
AC FAIL												✓		BCE 1 No.	
DC LV														BCE 1 Serial No.	
TCS															
ANALOG													No. Feeder	Feeder Name	
CT RATIO	300 / 5	300 / 5	300 / 5	300 / 5										DMC 07155	PE UPTOWN MACHANG NO 1
													DMC 07156	TX NO1 1000KVA	
													DMC 07157	PE PASARAYA UPTOWN MACHANG	
AMP 0%													DMC 07158	TX NO2 1000KVA	
AMP 50%															
AMP 100%															
CONTROL															
CB CTRL OPEN	✓	✓	✓	✓											
CB CTRL CLOSE	✓	✓	✓	✓											
EFI RESET	✓		✓												

**PIC Tapak** : AZRIN **PIC MASTER** :